

Overview

Our TrimFit® decals are vinyl window decals that can be made for any vehicle make or model that is not offered in our Precision-Cut® decal lineup. They are produced as rectangular decals, regardless of the window shape, and are slightly larger than the overall window width and height. After installation, vinyl trimming will be required to create a clean custom-fit look.

Keep in mind that the design you choose is going to be produced as a rectangular decal and portions of the design will be trimmed depending on the shape of your window (**Example C**). Some designs may not work well with certain window shapes — we will review your request and let you know if we foresee any issues.

We will add an additional inch to the measurements you provide to ensure that you have enough material to overlap all sides.

Step 1: Measure Overall Width

Using a tape measure (a yard stick or sewing tape measure will work as well), measure the overall width of the window area — be sure to keep the tape measure as parallel to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

Step 2: Measure Overall Height

Measure the overall height of the window area — be sure to keep the tape measure as perpendicular to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

Step 3: Photograph Window


Facing directly perpendicular to the window, take a photo that clearly shows the entire window.

Step 4: Submit Request


Please submit your TrimFit® decal request by completing our form at www.acorngfx.com/trimfit.

Questions & Support


If you have any questions, please don't hesitate to shoot us an email to support@acorngfx.com.

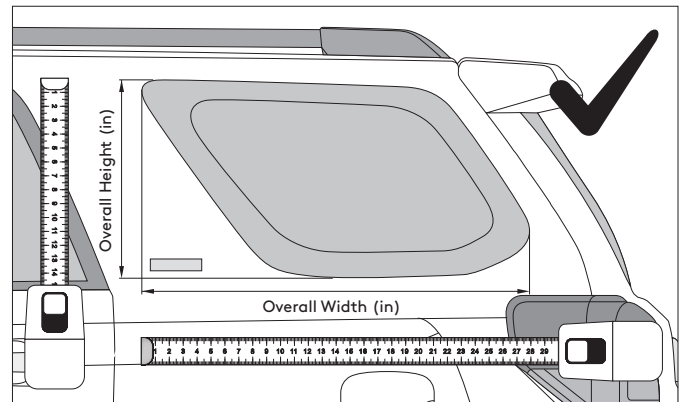

Example A — Correct Measurement

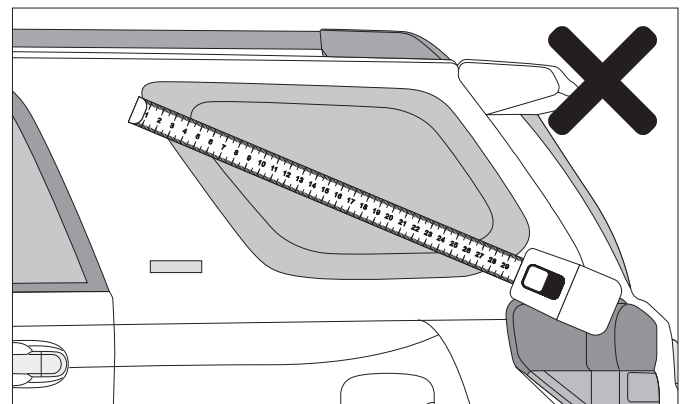

Example B — Incorrect Measurement

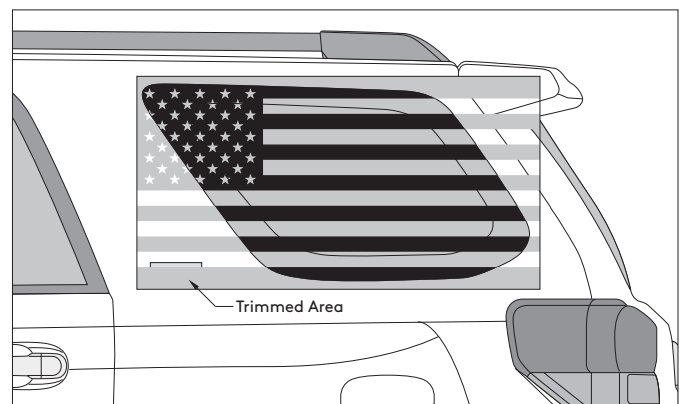

Example C — TrimFit® Decal Overlay