

TrimFit® Guide

Overview

Our TrimFit® decals are designed to be installed on an exterior window of any vehicle and then trimmed to create a clean, custom-fit look. They are produced as rectangular decals, regardless of the shape of the window. After installation, vinyl trimming will be required.

We include an application card, a link to our instructions, and our Limited Warranty with every order and offer optional products to make installation even easier.

Keep in mind that portions of the design will be trimmed depending on the shape of your window (see Example C below). Some designs may not work well with specific window shapes.


Pricing is based on the size of the decal, design, color, and quantity. Additional fees may apply for custom designs and multi-colored designs. Please use our TrimFit® Cost Estimator to determine the approximate cost of your decal.

Questions & Support


If you have any questions, please don't hesitate to shoot us an email to support@acorngfx.com.

Step 1: Measure Overall Width

Using a tape measure, measure the overall width of the window area — be sure to keep the tape measure as parallel to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

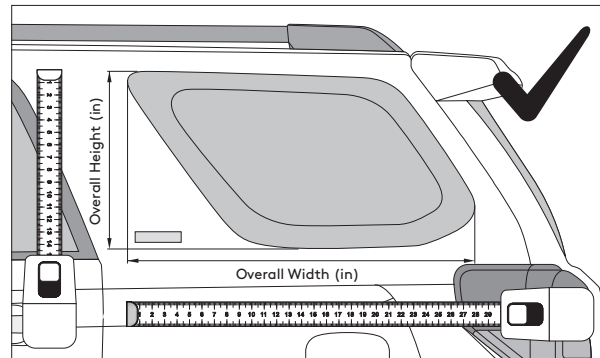

Example A — Correct Measurement

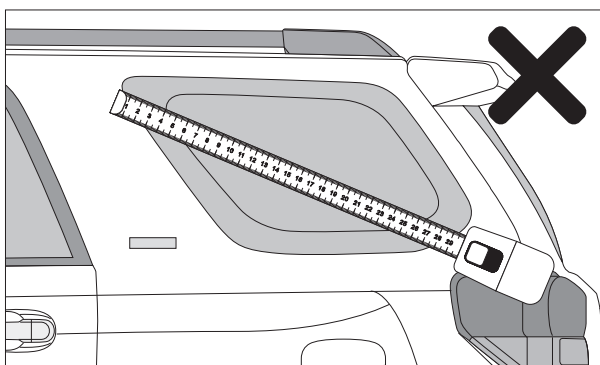


Example B — Incorrect Measurement

Step 2: Measure Overall Height

Measure the overall height of the window area — be sure to keep the tape measure as perpendicular to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

Step 3: Complete Purchase

After choosing your TrimFit® design, select the next largest measurement when purchasing your decal to ensure the decal fully overlaps the window (For Example: If your window measures 28" x 16", select a decal that is 30" x 20"). Complete the required information in the personalization section and complete your purchase.

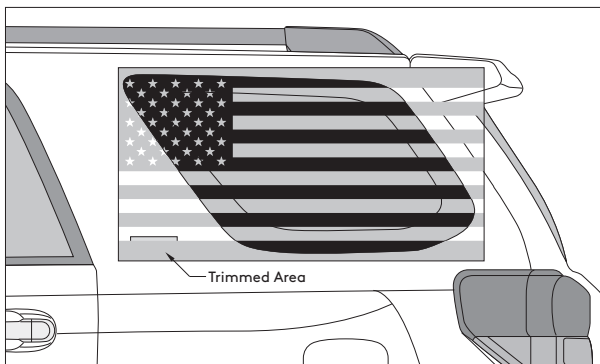

Example C — TrimFit® Decal Overlay