

TrimFit® Guide

Overview

Our TrimFit® decals are designed to be installed on an exterior window of any vehicle and then trimmed to create a clean, custom-fit look. They are produced as rectangular decals, regardless of the shape of the window. After installation, vinyl trimming will be required.

We include an application card, a link to our instructions, and our Limited Warranty with every order and offer optional products to make installation even easier.

Keep in mind that portions of the design will be trimmed depending on the shape of your window (see Example C). Some designs may not work well with specific window shapes.

Pricing is based on the size of the decal, design, color, and quantity. Additional fees may apply for custom designs and multi-colored designs.

If you have any questions, please don't hesitate to shoot us an email to support@acorngfx.com.

Step 1: Measure Overall Width


Using a tape measure, measure the overall width of the window area — be sure to keep the tape measure as parallel to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

Step 2: Measure Overall Height


Measure the overall height of the window area — be sure to keep the tape measure as perpendicular to the vehicle as possible (**Example A**). Do not measure at an angle (**Example B**).

Step 3: Contact Us


Please send an email to trimfit@acorngfx.com with your measurements, a photo of your window, and the design and color(s) you would like.

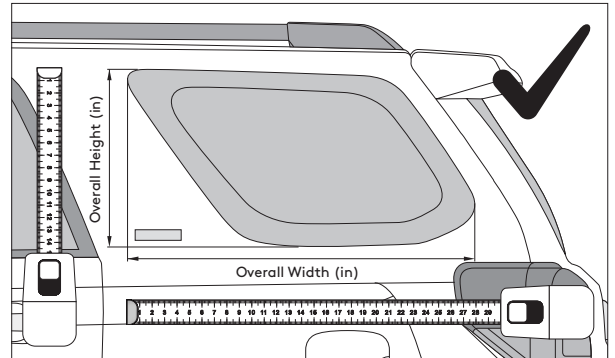

Example A — Correct Measurement

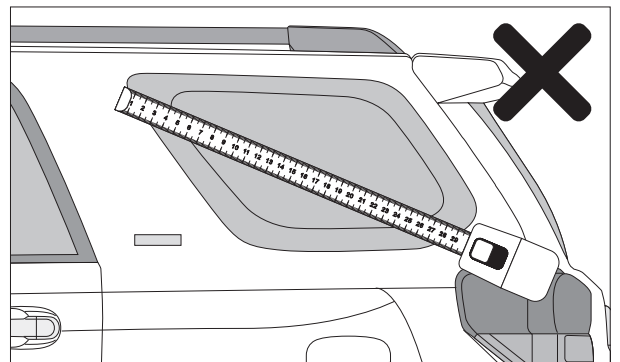

Example B — Incorrect Measurement

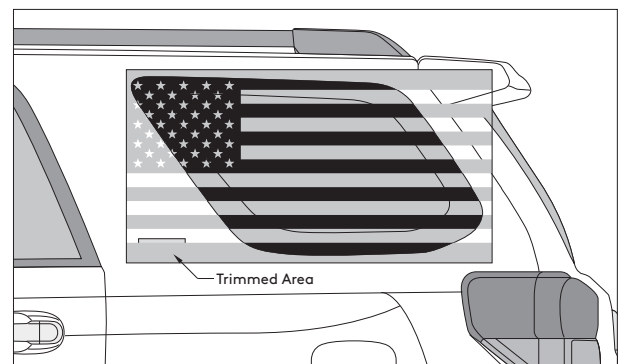

Example C — TrimFit® Decal Overlay